



Dell Inspiron 1521 Hard Drive Replacement

The Inspiron 1521 laptop originally comes with a 60 GB hard drive. With such limited memory space, it is recommended that you upgrade your hard drive.

Written By: Rogelio Ordonez



INTRODUCTION


This guide will instruct you how to remove your hard drive.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

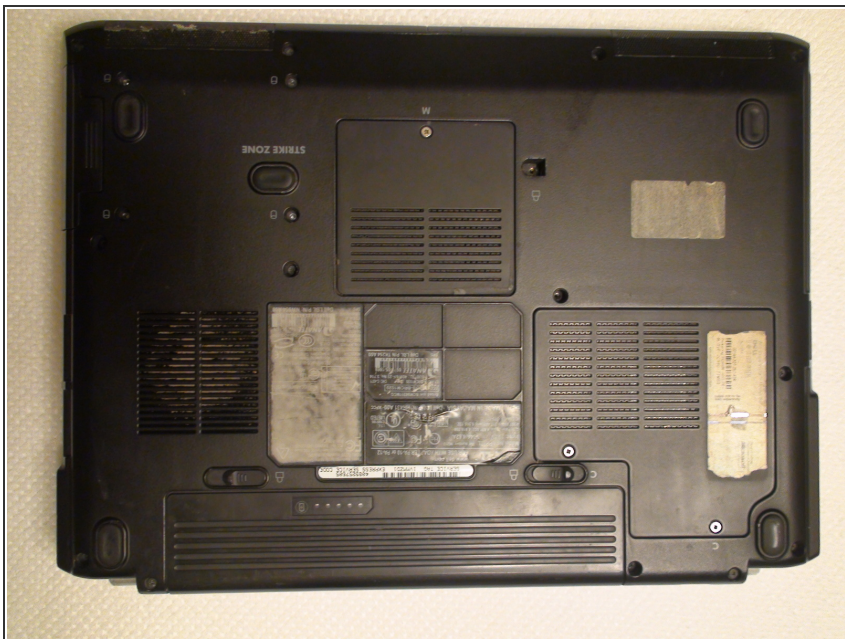



- Rotate the laptop so its bottom is facing up.

Step 2

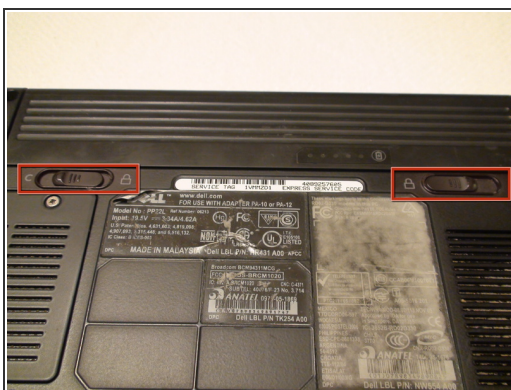

- Identify the lock mechanisms holding the battery in place.
- Slide each button outward with your fingers to disengage the battery.
- Pull the battery off with your hand to separate it from the laptop.

Step 3 — Hard Drive

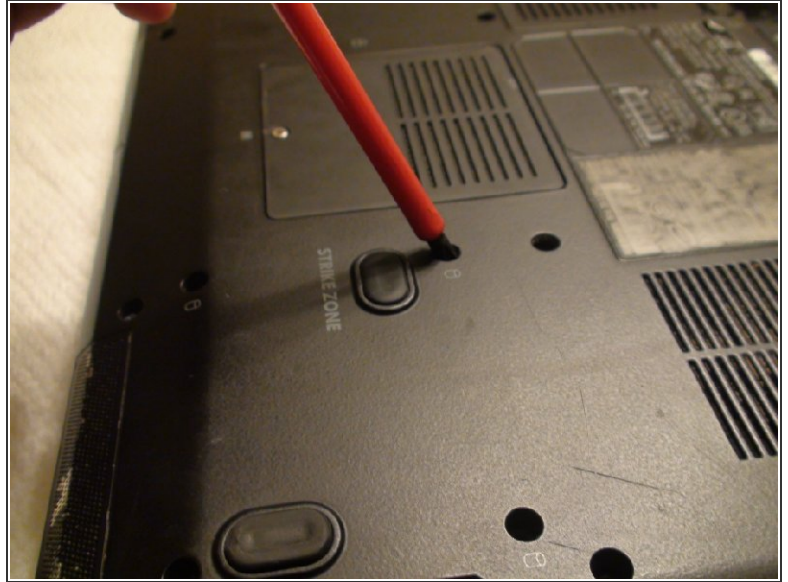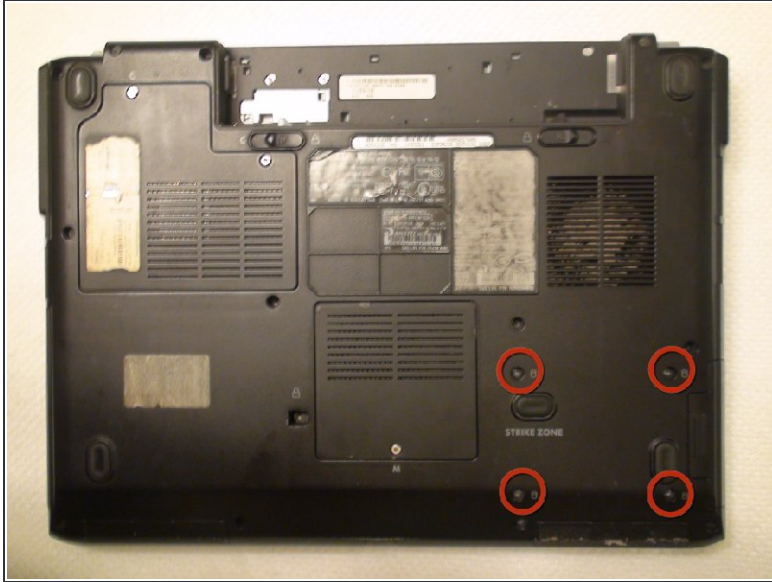

- Locate the four 4 mm Phillips #1 screws that secure the hard drive to the laptop. Each of the screws has a white cylinder next to it.
- Remove these four screws with a Phillips #1 screwdriver.

Step 4



- Once you've made sure all four screws are removed slide the hard drive out with your hand.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 01:26:50 AM.